



High Performance Electronic Components

9630 W. Irving Park Rd., Schiller Park, IL 60176

Phone (847) 671-5170

Fax (847) 671-4669

www.altronicsinc.com

QUICK TREE Instructions

- 1) POWER ON – MODE button turns Quick Tree on. Press, Hold (1 full second), Release.
- 2) POWER OFF – Quick Tree turns off automatically in one minute after no buttons have been pressed.
- 3) SETUP – Press the Mode button after Quick Tree is powered up to enter Setup.
 - A) DELAY – Use the UP and DOWN buttons to set amount of delay. Once the time is set press the MODE button again to go to the ROLL option.
 - B) ROLL - Use the UP and DOWN buttons to set amount of Roll out. Once the time is set press the MODE button again to go to the TREE option.
 - C) TREE - Use the UP and DOWN buttons to set the type of tree you want. Once the tree is set press the MODE button again to go to the AUTO TREE option.

OPTIONS:

 - a) 5FULL – 0.5 second full tree.
 - b) 4FULL – 0.4 second full tree.
 - c) 5PRO – 0.5 second pro tree.
 - d) 4PRO – 0.4 second pro tree.
 - D) AUTO TREE - Use the UP and DOWN buttons to set AUTO TREE. Once AUTO TREE is set press the MODE button to normal function.
 - a) On – allows simulated opponent side of tree to function.
 - b) Off – turns opponent side of tree off.
- 4) OPERATING – After your PRE-STAGE light is lit press and hold the TRIGGER button. This will turn your STAGE light on and then the other lights will follow. Release TRIGGER button at appropriate time and your reaction time will be displayed. Repeat above to go again.
- 4) AVE – Your average light is shown automatically if the TRIGGER button is not pressed for 5 seconds after showing your last reaction time.
- 5) BATTERY – Replace 9 volt battery when the LOW BATT sign is shown.

NOTE: Your settings will **not** be lost when changing battery.